



# Acer Chromebook CB3-111-C670 Screen Replacement

Replace the screen of your Acer Chromebook CB3-111-C670.

Written By: Allen Lewis



## INTRODUCTION

Use this guide to replace the screen of your Acer Chromebook CB3-111-C670. The screen replacement is a simple fix, and shouldn't take long at all.



### TOOLS:

- [Screwdriver](#) (1)
- [Heavy-Duty Spudger](#) (1)




### PARTS:

- [Acer CB3-111 Chromebook LCD](#) (1)


## Step 1 — Screen



 First make sure the laptop is powered off and unplugged before starting this repair.

- Use a spudger or plastic opening tool to pry the white frame away from the screen.
- The frame is held on by clips that will release as you move the spudger along the seam between the frame and the screen.

## Step 2

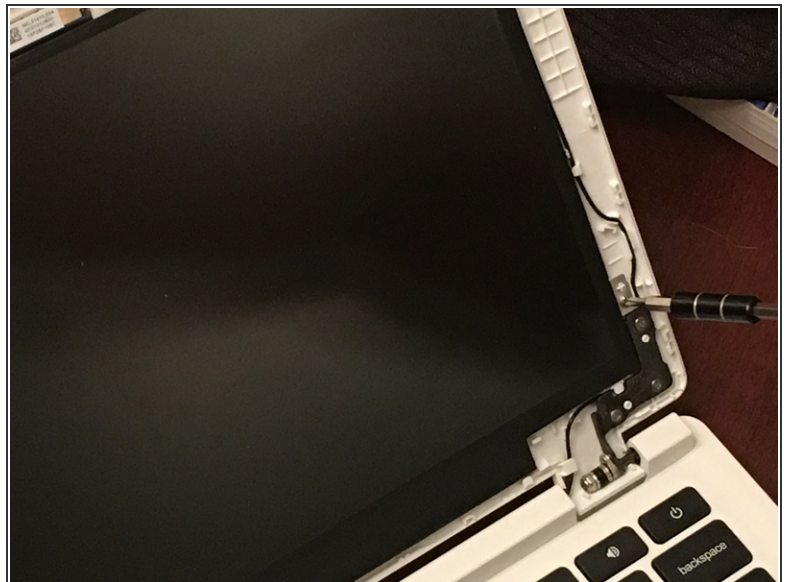

- Remove the 4 screws on silver brackets holding the screen to the back of the laptop.



## Step 3



- Lift the piece of tape covering the display connector.
- Unlock the ZIF connector by using a spudger to flip up the black tab on top of the connector.
- Pull the ribbon cable out with tweezers.
- Remove the screen.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-02 09:40:35 PM.